


Accessory:

Model No. LPC-420
Model No. LPC-430

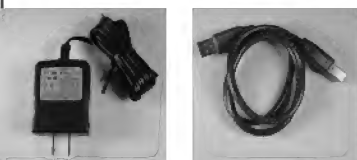

1. Switching Power Adapter (Input AC 100 - 240V, Output DC 5V 2.0A)
2. USB A-miniB cable: 50 cm.

Installation:



(Fig. 1)



(Fig. 2)



(Fig. 3)



(Fig. 4)



(Fig. 5)



(Fig. 6)



(Fig. 7)

1. Open foldable bottom base. (see Fig. 1)
2. Lift rubber pads and extend underneath legs if desired. (see Fig. 2)
3. If using the hub or card reader*, connect the power adapter to the LapCool 4. (see Fig. 3)
4. Connect notebook to LapCool 4 with enclosed USB cable. (see Fig. 4)
5. Switch on LapCool 4 and adjust fan speed as desired. (see Fig. 5)
6. Position notebook on top of the LapCool 4 securely. (see Fig. 6)
7. When not in use, the LapCool 4 should be switched off, media cards removed*, and cables stored in underneath compartments. (see Fig. 7)

***For card reader models only.**

Notes:

1. When not in use, please restore rubber pads, bottom supports, and foldable bottom base to their hidden positions.
2. Do not use other power adapters than the one provided. It may damage the unit.
3. While the USB hub supports USB 2.0, it requires that USB 2.0 already exist on the notebook. It will not add USB 2.0 functionality to a USB 1.1 port.

Tel: (510) 668-0368
Fax: (510) 668-0367
Address: 43951 Boscell Rd. Fremont, CA 94538

www.vantecusa.com

Copyright 2005 Vantec Thermal Technologies. All Rights Reserved